

## HEADLINING

### RENEW

76.64.01

Position front seats fully rearward and recline the passenger seat squab.  
Disconnect the vehicle battery ground lead.

#### Remove:

Sliding roof aperture flange 76.82.23 (where fitted).

Front passenger door veneer 76.47.11.

Front passenger door upper trim pad 76.34.02.

Front passenger door lower trim pad 76.34.03.

Rear console 76.25.05 (where fitted).

Centre console 76.25.01.

Headlining rear finisher 76.64.12.

Coat hanger hook 76.10.54.

Dowager strap 76.58.26.

Rear quarter trim pad upper LH 76.13.13.

Rear quarter trim pad upper RH 76.13.43.

Cantrail crash roll 76.13.10.

Illuminated sun visor 76.10.49.

Release roof console assembly from headlining, disconnect multiplugs and remove console.

Release multiplug connectors from clips at the roof console aperture.

Remove roof console retaining clip from headlining.

Remove security sensors (if fitted) and disconnect multiplugs.

Release headlining to body tags and lower headlining.

**CAUTION:** The headlining may only be removed or refitted in the following manner, any other sequence will result in permanent damage to the component.

#### Key to Figures

Fig. 1 Rear corner through passenger rear door opposite corner through driver side rear door.

Fig. 2 Across car with console cut out straddling 'B' - 'C' post.

Fig. 3 Tip forward against fascia tie bars with rear edge diagonally across door aperture.

Fig. 4 Feed the headlining out of the passenger front door, carefully easing the edge cutouts over door aperture and fascia tie bars.

Fitting and reassembly is the reversal of this procedure.

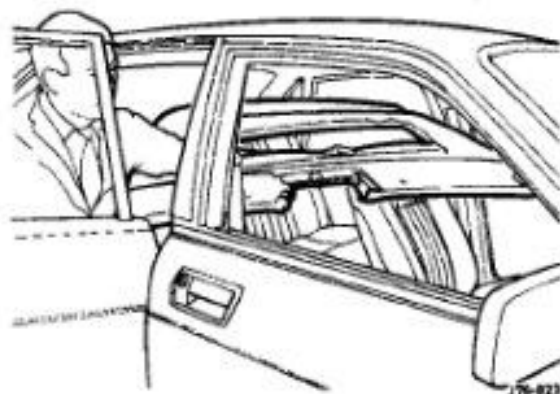


Fig. 1

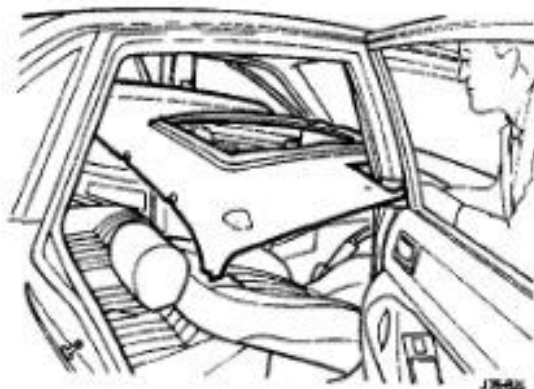


Fig. 2

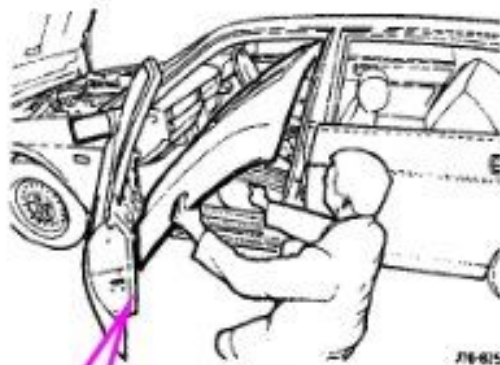


Fig. 3



**NOTE THE DOOR TRIM  
HAS BEEN REMOVED**