


ECU and Relays Location

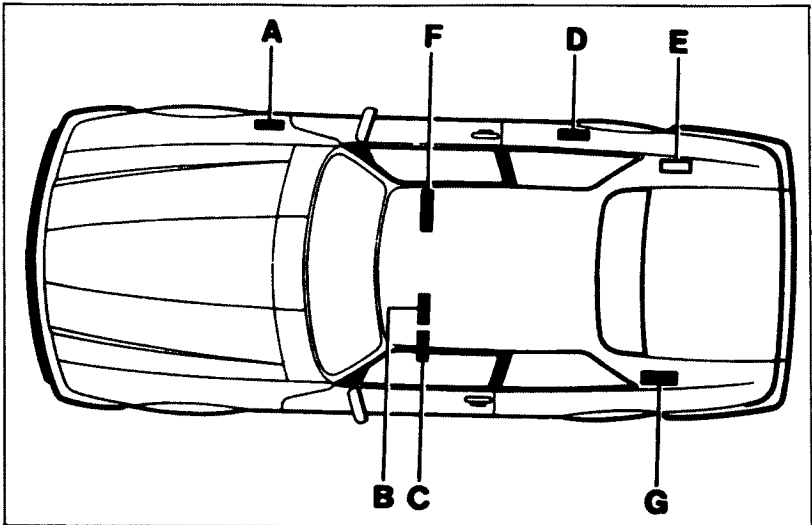

- | | |
|---|---|
| A. Engine management ECU (4.0L)
Marelli ignition ECU (V12) | E. Fuel injection ECU (V12 only) |
| B. Seat drive non-memory ECU | F. Seat memory ECU (handed - always on) driver's side |
| C. Speed control ECU | G. ABS ECU |
| D. Gearbox ECU (4.0L Automatic) | |

ECU locations